

**KLM UK ENGINEERING LTD TOOL LOAN LIST FOR B737 NG AND CLASSIC
EMBRAER 170/175, EMBRAER 190/195, RJ/BAE 146, FOKKER
70/F100**

**FOR TOOL LOANS PLEASE CONTACT:
ANTHONY GOODRUM - PROCUREMENT MANAGER
MOBILE TELEPHONE NUMBER: 44 (0)7384 468102
EMAIL: ANTHONY.GOODRUM@KLMUK.COM**

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
367	NDT TEST PLATE	B737
369	REFERENCE PLATE NDT	B737
45216	CRIMP TOOL	B737
45500	CRIMP TOOL	B737
59250	CRIMP TOOL T-HEAD 22-14 AWG	B737
59275	CRIMP TOOL T-HEAD 26-22AWG	B737
59461	CRIMP TOOL	B737
403562	PORTABLE DATA LOADER A615-3	B737
612648	CRIMP TOOL	B737
614464	CRIMP TOOL	B737
1809570	EXTRACTION TOOL	B737
5100857	APU EXHAUST PLUG	B737
7500823	BOROSCOPE,34CM,SRS5,CFM ENGINE	B737
9045003	LIGHT COMPARATOR (RADIOACTIVE)	B737
0061BN1	PROBE COVER - ICE DETECTOR	B737
007-02704-11	RIGGING PIN - CARGO DOOR	B737
10.177MM-REAMER	CENTRE TANK CORROSION B737	B737
11-03-0043	EXTRACTION TOOL	B737
12-2-N	COLD WORKING KIT 3/8" 2ND O/S	B737
16-130/OD	OD CHANNEL SEAL INST TOOL	B737
189727-1	EXTRACTION TOOL	B737
1QF2-3-64C	COUPLING-QUICK RELEASE	B737
20538-00	ULTRASONIC TEST SET	B737
271-E	10MHZ DDS FUNCTION GENERATOR	B737
29-90-114-10	SCREWDRIVER	B737
429EB	ARINC429 TEST BOX	B737
42A12/1	ULB TEST SET	B737
4-2-N	5/32" NOMINAL COLD EXPANSION	B737
471-3D	ADAPTOR TOOL	B737
5254-1	GREASE FITTING INST TOOL	B737
600-058	BAND TOOL	B737

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
625-0605	FLUKE 117/322 COMBO KIT	B737
700-T-039-69	INSERT ASSY	B737
700-T-039-79	INSERT ASSY	B737
700-T-039-89	DRAIN VALVE ASSY	B737
700-T-091-9	PRESSURE TEST TOOL	B737
705-7132	CLAMP METER	B737
737 TAIL JACK	TAIL JACK B737	B737
737B27-81-41-6A-1	L/E SLAT ACT LOCK IND CHK KIT	B737
7ME65-73761-1	MLG FWD TRUNNION BEARING TOOL	B737
839B1-4	RIVET SNAP DIE (CHERRY)	B737
839B1-5	RIVET SNAP DIE (CHERRY)	B737
839B1-6	RIVET SNAP DIE(CHERRY)	B737
839B1-7	RIVET SNAP DIE (CHERRY)	B737
839B3	RIVET SNAP DIE (CHERRY)	B737
856A1012G01	COUNTERTORQUE TOOL	B737
856A1051G01	LEVER ARM PULLER	B737
856A1130G01	FAN BLADE RELUB KIT CFM	B737
856A1221G01	VARIABLE STATOR RIG PIN SET	B737
856A1330G01	ENG TEST LEAD	B737
856A1336G02	TOOL KIT - ADAPTOR TORQUE	B737
856A1469G02	MEC WRENCH SET	B737
856A1480G01	ENGINE PRESERVATION UNIT HMU	B737
856A1827G01	HMU FUEL PUMP NUTS ADAPTOR SET	B737
856A2007P01	REMOVAL TOOL	B737
856A2501G01	WRENCH-RATCHET,VBV MANUAL CONT	B737
856A2609G01	JACKING BLOCK - FUEL PUMP	B737
856A2691G01	PLIERS - ELASTOMER SPACER	B737
856A2954G01	PULLER FAN BLADE SPACERS	B737
856A3409G01	PINS,GUIDE,SPINNER	B737
856A3419G02	OIL INLET COVER ADAPTER PULLER	B737
856A3509G01	ADAPTOR	B737
856A3560G01	BEAM HOIST FUEL PUMP	B737
856A3578G07	GRIPS-MASS BALANCING CFM	B737
856A3591G01	PROTECTOR	B737
856A3604P01	WRENCH,HORZ.DRIVE SHAFT NUT	B737
856A3625G01	ADAPTOR - INNER SEAL	B737
856A3629P02	MID SPAN SHROUD INSP GAUGE	B737
856A3707G08	PULLER, FAN BLADE SPACER	B737
856A3778G01	GUIDE PINS SPINNER REAR CONE	B737
856A3779G02	PULLER PLATFORMS FAN BLADES	B737

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
856A3782G02	WRENCH REMOVAL FAN	B737
856A4628G01	FAN BLADE TOOL	B737
856A4640G01	FAN BLADE TOOL	B737
856A6629G03	WEAR INSPECTION TOOL	B737
8708(453-1000)	ARTEX ELT TEST SET	B737
879B	LCR METER	B737
90204-4	CRIMP TOOL	B737
903-281	CHAIN HOIST(TIGER)	B737
906-10247-3	LOOP RESISTANCE TESTER	B737
91522-1	CRIMP TOOL	B737
94-8136	MAIN TANK SUMP DRAIN TOOL	B737
966A1	OPTICAL MICROMETER	B737
A09003-2	STEERING BYPASS PIN NLG TOWING	B737
A10002-7	PITOT STATIC COVER REM/INST	B737
A20005-9	CONTROL CABLE CLAMP	B737
A20006-32	GROMMET INST SET - NAS1368	B737
A25020-8	GAUGE,SEAT TRACK,FLIGHT CREW	B737
A27092-84	PROX SENSOR SET-ACT/DE-ACT	B737
A32045-111	SPANNER - WRENCH	B737
A32066-1	NLG DRAIN EQUIPMENT TOOL	B737
A35001-10	RETRACTION EQUIP	B737
A376	TEST PLATE NDT-B737	B737
A38001-22	VACUUM WASTE SYSTEM TEST EQPT	B737
A38003-20	TOILET BLOCKAGE REMOVER	B737
A38007-1	VACUUM WASTE SYSTEM PLUG	B737
A38009-11	LAV WASTE TANK SENSOR CLEANER	B737
A38010-11	POTABLE WATER QTY TX TEST LEAD	B737
A38012-39	VACUUM LAV SYS PUMP EQPT	B737
A386	TEST PLATE NDT-B737	B737
A389A	REFERENCE STANDARD	B737
A389B	REFERENCE STANDARD	B737
A389C	REFERENCE STANDARD	B737
A49002-2	APU GENERATOR LIFTING EYE	B737
AFS-1346	NDT INSPECTION KIT	B737
AM1940-100	DOLLY - INLET COWL	B737
ANDT1050	REFERENCE STANDARD B737	B737
ANDT1051	REFERENCE STANDARD B737	B737
ANDT1052	REFERENCE STANDARD 737 PT6	B737
ANDT1053	REFERENCE STANDARD B737	B737
ANDT1054	REFERENCE STANDARD 737 PT6	B737

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
ANDT1056	REFERENCE STANDARD 737 PT6	B737
ANDT1079	BOEING STANDARD 737 PT6	B737
ANDT1080	BOEING STANDARD,737 PT6	B737
ANDT1081	BOEING STANDARD 737 PT6	B737
ANDT1082	BOEING STANDARD 737 PT6	B737
ANDT3004	REFERENCE STANDARD B737	B737
ANDT3006	REFERENCE STANDARD B737	B737
ANDT3019	REFERENCE STANDARD B737	B737
AS5180W04	ADAPTER	B737
AT520J	SWAGING KIT	B737
ATA2079	REMOVAL TOOL	B737
ATML2803	EXTRACTION TOOL	B737
AV50-15/23M	JACK-BOTTLE 50 TONS	B737
AY969-00667-001	ERT-550 CABLE(FOR DRA-707)	B737
B20004-42	LEVERAGE ADAPTOR EQUIPMENT	B737
B26002-1	FIRE BOTTLE TEST SET	B737
B28001-5	SUMP DRAIN VALVE ADAPTOR	B737
B28003-1	PULLER - FUEL BOOSTER PUMP	B737
B28009-1	ALIGN EQUIP,FUEL S/O VALVE	B737
B71040-39	SLING - ENGINE COWL	B737
B78009-26	THRUST REVERSER	B737
BC400	BRAKE CRADLE	B737
BH24944-9 KIT	TEMPCAL TESTER B737 CLASSIC/NG	B737
BHR200WAE	HAMMER DRILL-MAKITA	B737
BONDASCOPE 3100	ULTRASONIC BOND TESTER	B737
BT2700HGV	EFB TEST ROUTER	B737
BT-BS-625	STRAP WRENCH 90 DEGREE	B737
C07002-1	ADAPTOR SET WING JACK-B737NG	B737
C07007-11	ADAPTOR FWD BODY JACK-B737NG	B737
C10004-1	PROTECTIVE COVER - AOA VANE	B737
C12002-7	DRAIN TOOL	B737
C13/C33	REFERENCE STANDARD	B737
C20001-1	ROLLER SWAGE	B737
C21001-19	COOLING TEST SET	B737
C21005-70	AIRCO PACK REM JACK ADAPTOR	B737
C24002-40	JACK ADAPTOR	B737
C24003-1	BATTERY TRAY ASSY REM/INST EQ	B737
C24004-1	POWER DIST PANEL REM/INST EQPT	B737
C25002-1	INST/REM BSI CEILING PANELS	B737
C26002-21	TEST BOX	B737

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
C26004-33	ENGINE FIRE EXT SYSTEM TESTER	B737
C26006-1	CARGO FIRE EXT TEST BOX	B737
C27001-41	O/B GROUND SPOILER LOCK SET	B737
C27001-42	GROUND LOCK SET O/B SPOILER	B737
C27001-51	LOCK SET O/B SPOILER ACT	B737
C27003-31	RUDDER SLING	B737
C27007-31	ACTUATOR SWITCH TEST MODULE	B737
C27008-22	FLAP CTR LOCK	B737
C27012-3	O/B FLAP ACTUATOR LOCK	B737
C27012-4	O/B FLAP ACTUATOR LOCK	B737
C27022-1	FLAP DR TUBE CL SET	B737
C27028-21	RIGGING BAR-ELEVATOR TAB B737	B737
C27030-33	BACKLASH TOOL	B737
C27034-1	ELEVATOR SLING	B737
C27035-20	RUDDER REM/INST SLING	B737
C27038-6	LOCKOUT PIN	B737
C27040-1	FLAP TRACK HOIST ADAPTOR	B737
C27041-1	FLAP TORQUE TUBE COUPLING	B737
C27042-1	RUDDER PCU ATT EQUIP WRENCH	B737
C27044-15	BEAM,ELEV RIGGING INDEX PLATE	B737
C27045-1	SLAT RIGGING KIT	B737
C27046-13	GROUND LOCK SET I/B SPOILER	B737
C27047-43	LOCK SET - FLIGHT SPOILER ACT	B737
C27049-36	RUDDER PCU REM/INST EQUIP	B737
C27050-82	STAB JACKSCREW REM/INST EQUIP	B737
C27051-1	LE SLAT & KRUEGER LOCK SET	B737
C27051-29	LEADING EDGE DEVICE LOCK SET	B737
C27052-25	FLAP TRAILING EDGE SLING	B737
C27055-1	AILERON SLING	B737
C27056-19	L/E SLAT SLING	B737
C27057-1	RUDDER GROUND LOCK	B737
C27060-1	CONTROL WHEEL ADAPTOR	B737
C27064-1	TORQUE WRENCH ADAPTOR	B737
C27066-1	LOCK EQUIP	B737
C27069-12	INTERLOCK VALVE RIGGING EQUIP	B737
C27071-1	L/E ACTUATOR EYE END RMVL TOOL	B737
C27078-1	MEASUREMENT TOOL-STAB SYS TEST	B737
C27085-1	REMOVAL TOOL	B737
C27107-1	LOCK SET FLIGHT SPOILER ACT	B737
C28001-1	WING TANK SUMP DRAIN TOOL	B737

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
C28002-9	FUEL SUMP DRAIN VALVE WRENCH	B737
C29002-17	RUDDER PCU TEST BOX	B737
C3/C29	REFERENCE STANDARD	B737
C32002-1	NLG INNER CYL RING COMPRESSOR	B737
C32012-12	MLG/NLG WHEEL NUT REM/INST EQ	B737
C32013-1	AFT TRUNNION TORQUE ADAPTOR	B737
C32014-1	SPRING EXTENDER-DOWNLOCK	B737
C32015-1	FUSE PIN PULLER-MLG FWD	B737
C32017-1	KIT MLG SEAL CHANGE	B737
C32018-1	SEAL PROTECTOR	B737
C32021-1	ANTI-SKID MLG XDCR WRENCH	B737
C32022-17	MLG AXLE THREAD PROTECTOR	B737
C32022-20	THREAD PROTECTOR EQUPT AXLE NG	B737
C32023-1	WRENCH - TRUNNION BEARING,MLG	B737
C32026-1	DOWNLOCKS MLG/NLG	B737
C32029-1	PIN INST/REM KIT - MLG	B737
C32030-10	OLEO LOCK ASSY MLG/NLG	B737
C32031-1	AFT TRUNNION PIN REM/INST TOOL	B737
C32032-57	PULLER,MLG AXLE/BRAKE SLEEVE	B737
C32033-1	TRUNNION PIN NLG REM/INST TOOL	B737
C32034-228	PROTECTOR	B737
C32043-1	NLG STEERING VALVE NUT WRENCH	B737
C32050-1	LOCKOUT PIN - TAIL SKID	B737
C34005-16	RAD ALT TX/RX EXTENDER BOX	B737
C38001-23	DRAIN MAST PLUG-WASTE WATER	B737
C38002-1	DOOR SILL DRAIN PLUG EQPT	B737
C49003-1	APU CRADLE	B737
C49004-36	SLING ASSY APU	B737
C49008-37	APU JACKING ADAPTOR	B737
C49010-50	APU CRADLE AE131-9B	B737
C52008-1	ADAPTOR,TORQUE WRENCH	B737
C52012-59	BARRIER ENTRY & GALLEY DOOR	B737
C54001-37	STRUT REMOVAL/INST SLING	B737
C54004-11	ENGINE FAN CASE SLING KIT	B737
C54005-1	SOCKET-FUSE PIN NACELLE STRUT	B737
C54008-1	AFT FAIRING PYLON REM/INST	B737
C54008-28	AFT FAIRING PYLON REMOVAL TOOL	B737
C55001-1	ELEVATOR SLING	B737
C55002-1	PIN PUNCH SET	B737
C55005-11	HORIZ STAB PIN REM EQUIP	B737

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
C55007-1	HORIZONTAL STABILISER SLING	B737
C55007-29	SLING EQUIPMENT	B737
C55010-1	VERTICAL STABILISER SLING	B737
C56001-1	SOCKET ASSEMBLY - WINDOW LATCH	B737
C57001-1	ROLLER SWAGE EQUIP-HINGE BRKT	B737
C57002-15	WINGLET SLING REM/INST	B737
C71002-81	THRUST REV & COWLING HANDLING	B737
C71003	BOOTSTRAP KIT	B737
C71003-127	BOOTSTRAP KIT	B737
C71005-33	FAN COWL SLING ASSY	B737
C71012-35	ENGINE VIB ISOLATION TEST SET	B737
C71015-83	SLING HANDLING CFM56	B737
C76002-1	CONTROL STAND HAND TOOL SET	B737
C77002-20	STALL WARNING SYSTEM	B737
C78001-13	T/R HOLD OPEN ROD (SET OF 2)	B737
C78003-52	SLING THRUST REVERSER 737	B737
C78004-1	LOCK OUT PIN (SET OF 2)	B737
C78009-33	EXH NOZZLE/PLUG HAND EQUIPMENT	B737
C78010-1	LATCHING ROD - T/R AND COWL	B737
C78015-2	FAN DUCT COWL & T/R ALIGN ROD	B737
C78018-47	THRUST REVERSER SLING CFM56-7	B737
C78019-15	THRUST REV COWL LATCH	B737
C78020-14	THRUST REV C DUCT LATCH TOOL	B737
C78021-1	THRUST REV COWL HOLD OPEN EQPT	B737
C78025-21	THRUST REV ACT INST/REM TOOL	B737
C78033-1	T/R COWL HOLD OPEN LEAP-1B	B737
C78035-1	LOCK ASSY - T/R ACT LEAP-1B	B737
CB602-3	NUTPLATE PUSHOFF STRENGTH TEST	B737
CB602-4	NUTPLATE PUSHOFF STRENGTH TEST	B737
CL5	THICKNESS METER	B737
D01030A2D1B01B0	JACK-TRIPOD, B737 TAIL	B737
D03517K2D1B01B0	JACK TRIPOD WING B737NG	B737
D72D72684-111	SCREWDRIVER BIT - SPECIAL	B737
DAK16	INSERTION TOOL	B737
DAK16A	INSERTION TOOL	B737
DAK16B	INSERTION TOOL	B737
DAK20	INSERTION TOOL	B737
DAK20B	INSERT/EXTRACT TOOL	B737
DAK55-12A	REMOVAL TOOL	B737
DAK55-16	INSERTION TOOL	B737

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
DB75-108	ADAPTER STARTER DRAIN, ENGINE	B737
DFX2-100-NIST	FORCE GAUGE DIGITAL 100X0.1LBS	B737
DHK21	TOOL	B737
DIGIMANO 2000	DIGITAL PRESSURE-VACUUM METER	B737
DPTR035C1160002900	JACK TRIPOD WING-B737	B737
DRK12	REMOVAL TOOL	B737
DRK125-23	EXTRACTION TOOL	B737
DRK12B	REMOVAL TOOL	B737
DRK16B	REMOVAL TOOL	B737
DRK20	REMOVAL TOOL	B737
DRK56-12	REMOVAL TOOL	B737
DRK56-16	REMOVAL TOOL	B737
DRK56-20A	REMOVAL TOOL	B737
DRK56-22A	EXTRACTOR TOOL	B737
DRK56-4	REMOVAL TOOL	B737
F70085	WRENCH-BEARING RETAINER NUT	B737
F70200-1	INFLATION TOOL	B737
F70207-139	RIGGING PIN SET B737CL	B737
F70207-151	RIGGING PINS, KIT	B737
F70207-29	RIGGING PIN-T/R FEEDBACK	B737
F70263-1	LOCK ASSY-NLG OLEO B737	B737
F70284-1	RECEPTACLE WEAR GAUGE SET	B737
F70321-1	INSTALLATION MANDREL	B737
F70326-1	TORQUE WRENCH ADAPTOR	B737
F70328-1	PROBE-FILM RESISTANCE MEASURE	B737
F70330-104	STATIC BAL EQPT-CONT SURFACES	B737
F70333-24	CSD/AC GENERATOR ADAPTOR	B737
F71252	PINION GEAR ADAPTOR-STAB TRIM	B737
F71329	FUEL TANK TESTER	B737
F71336-501	STABILIZER TRIM LOCK	B737
F72731-114	TEST LEAD	B737
F72731-115	TEST LEAD	B737
F72731-130	TEST LEAD	B737
F72731-81	LEAD FQT (B737 CLASSIC)	B737
F72735	GROUND LOCK ASSY (737)	B737
F72790	CONTROL WHEEL PROTRACTOR MOUNT	B737
F72867-1	ADAPTOR	B737
F72913-11	MLG PROTECTOR	B737
F72913-14	THREAD PROTECTOR MLG	B737
F72913-15	THREAD PROTECTOR NLG	B737

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
F72913-8	MLG PROTECTOR	B737
F72917-19	TEST EQUI GROUND FAULT PROTEC	B737
F72949-1	FUEL MEASURING STICK OP TOOL	B737
F72950-158	APU TRANSPORTATION EQPT	B737
F72952-15	PROTRACTOR ADAPT (THRUST LEVER	B737
F72959-40	SPANNER WRENCH	B737
F73010-27	LAVATORY DRAIN LEAK TESTER	B737
F80006-34	SLING ASSY-HORIZONTAL STAB	B737
F80006-52	SLING ASSY,HORIZONTAL STAB	B737
F80013-1	ADAPTER - PIN SPANNER	B737
F80014-16	STAB JACKSCREW HANDLING EQUIP	B737
F80014-2	STAB JACKSCREW HOIST ADAPTOR	B737
F80020-5	MLG TRUNNION NUT TOOL	B737
F80027-18	STAB LOCK	B737
F80032-1	ADAPTOR,MLG ORIFICE PLATE	B737
F80033-1	GLAND NUT WRENCH	B737
F80033-8	GLAND NUT WRENCH	B737
F80035-18	SLING ASSY - VERTICAL TAIL	B737
F80039-1	B737 APU HOIST	B737
F80040-2	INBD SPOILER GROUNDLOCK	B737
F80048-84	KIT LOCK ASSY	B737
F80049-2	LOCK ASSY	B737
F80049-32	LOCK ASSEMBLY - FLIGHT CONTROL	B737
F80049-56	LOCK ASSEMBLY-FLIGHT CONTROLS	B737
F80049-66	FLIGHT CONTROL LOCK ASSY	B737
F80053-1	FACE SPANNER,LUG	B737
F80055-1	TRAMMEL BAR	B737
F80060-1	WING JACKING ADAPTOR B737	B737
F80063-501	RESTRAINING TOOL	B737
F80076-1	APU EXHAUST PLUG	B737
F80088-3	NLG TUBE HOLDING FIXTURE	B737
F80096-1	FWD TRUNNION BRG HSG HOLD FIX	B737
F80109-3	GROUND LOCK ASSY	B737
F80113-37	ROLLER BEARING KIT	B737
F80113-61	ROLLER BEARING KIT	B737
F80113-88	BEARING ROLLER KIT	B737
F80114-1	APU CRADLE	B737
F80114-25	B737 APU CRADLE	B737
F80115-1	THREAD PROTECTOR & ALIGN TOOL	B737
F80115-16	MLG PROTRACTOR ALIGNMENT TOOL	B737

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
F80115-2	SPRING SUPORT SHAFT ALIGN TOOL	B737
F80118-1	ROLLER SWAGE TOOL	B737
F80118-31	SWAGE KIT-BEARING	B737
F80118-38	BEARING SWAGE KIT	B737
F80122-4	TORQUE ADAPTOR-FLAP TRANS	B737
F80122-9	FLAP DRIVE TRANS TORQUE ADAPT	B737
F80126-1	MLG SLEEVE AXLE PULLER ASSY	B737
F80135-1	CABLE ASSY HYD LEAK CHECK	B737
F80135-10	INT LEAK RATE TEST	B737
F80141-1	MLG TREAD PROTECT & ALIGN TOOL	B737
F80153-1	INPUT ARMS SAFETY PIN	B737
F80155-1	RAM AIR EXHAUST LEAK TESTER	B737
F80158-1	PULLER SET TRUNNION	B737
F80158-17	TRUNNION PIN & BEARING PULLER	B737
F80160-1	NLG SHOCK STRUT EXT TUBE	B737
F80162-1	NOSE GEAR ACTUATOR ROD CLAMP	B737
F80166-1	PRESSURE RELIEF TESTER	B737
F80167-2	NEEDLE-FLAP LUBE	B737
F80167-3	NEEDLE-FLAP LUBE	B737
F80167-4	NEEDLE-FLAP LUBE	B737
F80169-1	MLG SPRING EXPANDER SET	B737
F80171-1	WRENCH TORQUE ADAPTOR - B737	B737
F80176-8	MLG TORQUE WRENCH ADAPTER TOOL	B737
F80178-1	SETTING TOOL - FWD ENTRY DOOR	B737
F80179-1	LANDING LIGHT ADJ TOOL-B737	B737
F80188-17	APU SLING	B737
F80195-1	THRUST LEVER CONT STAND DOWEL	B737
F80197-5	WRENCH SET	B737
F80198-12	GAUGE ASSY	B737
F80198-14	NLG GAUGE	B737
F80202-1	NOSE WHEEL STEERING CYL ADAPT	B737
F80209-1	OUTBOARD FLAP RIGGING BEAM	B737
F80213-1	SLING-TRAILING EDGE FLAPS I/B	B737
F80213-27	SLING-TRAILING EDGE FLAPS O/B	B737
F80213-3	CABLE ASSY I/B T/E FLAPS	B737
F80213-46	SLING ASSY O/B T/E FLAPS	B737
F80222-1	PROTRACTOR ASSY	B737
F80222-11	PROTRACTOR-AILERON TAB ALIGN	B737
F80230-1	ELEV INDEX PLATE RIGGING BEAM	B737
F80239-21	SAFETY LANYARD	B737

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
F80239-22	SAFETY LANYARD	B737
F80255-11	ALIGNMENT & GUIDE PINS	B737
FB70000-1	ENGINE CRADLE CFM56-3	B737
FB70062-1	IDG HOIST ADAPTOR-B737	B737
FB70077-100ISSB	ENGINE CRADLE CFM56-7	B737
FTC102	COVER TOTAL AIR TEMP	B737
G25012-8	ANTI-RATTLE NUT WRENCH KIT	B737
G28005-42	FIXTURE - CHECK VALVE	B737
G32021-18	FORCE GAUGE EQUIP	B737
G34002-1	PORTABLE CALIBRATOR	B737
G38006-1	VACUUM WASTE SYS BLOCKAGE REM	B737
G76002-15	PROTRACTOR-THRUST REV LEVERS	B737
GE-CTF-21R	GO/NO GO GAUGE	B737
GET710001	ENGINE PEDESTAL SET CFM56-3	B737
GR5B	LOAD CELL	B737
GS15047-1	VALVE TEST FIXTURE	B737
HC120120E51	HEAT MAT	B737
HC120120E51E1	HEAT MAT	B737
HC240120E51	HEATER BLANKET	B737
HW070202A02A	NLG TILTING DOLLY B737NG	B737
IA2401-1	JUMPER CABLE 12'	B737
IFR4000	NAV/COMM TEST SET	B737
J20009-38	JACKING EQPT-HYD TELESCOPING	B737
J20009-68	APU INST ADAPTOR	B737
J24015-1	PRESSURE TEST EQUIPMENT	B737
J32060-1	DRAIN EQUIP,L/GEAR SHOCK STRUT	B737
J34002-19	ANGLE OF ATTACK FIXTURE	B737
JMP/CFM56/A/6780	CFM 56-3 INHIBITING ADAPTOR	B737
K1025S	CRIMP TOOL LOCATOR	B737
K817-11	POSITIONER	B737
K818-11	POSITIONER	B737
KEN582-779	1 1/8" AF SOCKET-B737 IGN PLUG	B737
KPC3-480-325	COVER PROBE PITOT	B737
KPC3-640-35	COVER-PITOT TUBES VERT STAB	B737
KPC3-775-625	PROBE COVER	B737
KTH1000	CRIMP TOOL	B737
L4H600	LEVER HOIST ROUSTABOUT 3T	B737
LH102	LOAD CELL	B737
LH502	LOAD CELL 0-4500KG(0-10000LBS)	B737
LMC11G84-1	ENGINE INLET COVER	B737

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
LMC11G84-2	ENGINE EXHAUST COVER	B737
LS100	LIGHT METER	B737
M1B-KIT	M1 MILLIOHM METER (GREEN ONLY)	B737
M22520-2-11	POSITIONER	B737
M81969-19-03	REMOVAL TOOL	B737
MIT002A0014-12	BOLT EXTRACTION TOOL	B737
MIT65-45116	SPEED BRAKE VALVE RIGGING TOOL	B737
MIT65C37785-1	STRUT MIDSPAR INST TOOL B737CL	B737
MTL-978-8140K	ESCAPE SLIDE BUSTLE STRAP KIT	B737
NDT1039-16/16	REFERENCE STANDARD	B737
NDT1039-20/16	REFERENCE STANDARD	B737
NDT1040	REFERENCE STANDARD	B737
NDT1041	REFERENCE STANDARD	B737
NDT1042	REFERENCE STANDARD	B737
NDT1043	REFERENCE STANDARD	B737
NDT1044	REFERENCE STANDARD	B737
NDT1045	REFERENCE STANDARD	B737
NDT1047	REFERENCE STANDARD	B737
NDT1083	REFERENCE STANDARD	B737
NDT1087-1	REFERENCE STANDARD PT6 B737	B737
NDT1087-3	REFERENCE STANDARD NDT	B737
NDT1087-6	REFERENCE STANDARD DUAL FREQ	B737
NDT1088-072/050	BOEING 737 REFERENCE PLATE	B737
NDT1088-144/050	BOEING STANDARD 737 REF PLATE	B737
NDT1094-040	BOEING STANDARD 737/747	B737
NDT1094-040A	BOEING STANDARD 737/747	B737
NDT1094-050-A	REFERENCE STANDARD	B737
NDT1094-070-A	REFERENCE STANDARD	B737
NDT1094-090-A	REFERENCE STANDARD	B737
NDT1094-110-A	REFERENCE STANDARD	B737
NDT1106	REFERENCE STANDARD COMPOSITE	B737
NDT194B	BOEING REF STANDARD	B737
NDT3016-B	SLOT	B737
NDT3021	NDT WING FLAP KIT	B737
NDT3024H	REFERENCE STANDARD	B737
NDT3050	REFERENCE STANDARD	B737
NDT3053	NDT REFERENCE STANDARD	B737
NDT3065	NDT TEST PLATE	B737
NDT3068	REFERENCE STANDARD	B737
NDT3077	REFERENCE STANDARD	B737

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
NDT3082A	BOEING STANDARD	B737
NDT3082B	BOEING STANDARD 737	B737
NDT3082C	BOEING STANDARD	B737
NDT3092	REFERENCE PLATE	B737
NDT3102	REFERENCE STANDARD	B737
NDT3118	REFERENCE STANDARD	B737
NDT3150	REFERENCE BLOCK	B737
NDT3220	BOEING STANDARD C/W POSITIONER	B737
NDT3249	REFERENCE STANDARD 737	B737
NDT3250	REFERENCE STANDARD 737	B737
NDT3276	REFERENCE STANDARD	B737
NDT3276A	REFERENCE STANDARD	B737
NDT396	REFERENCE STANDARD	B737
NDT398	REFERENCE STANDARD	B737
OHME65-45888	SLING-FORWARD AIRSTAIRS	B737
POSITECTOR 6000 NS2	NON-FERROUS GAUGE	B737
PR-524	LIGHTMATE PHOTOMETER	B737
PSD60-2R	CALIBRATION UNIT FUEL SYSTEM	B737
PSD60-503	INTERFACE CABLE FUEL QUANTITY	B737
PSD60-504	CABLE	B737
PSS22300	PITOT STATIC TEST ADAPTORS	B737
R/C-AOAC-2	COVER - VANE, ANGLE OF ATTACK	B737
RKC7025	PORTABLE CUTTER	B737
RKS4101-7	SWAGE TOOL	B737
RL-NLG32-2430	NLG RAMP WHEEL LOCK	B737
RSABG0003	PLUG-APU (NG)	B737
RST2512	STAKING TOOL	B737
S1820514-02	ELT MAINTENANCE DONGLE	B737
S7/8/9 CFM56	7/16" PLUG REMOVAL LONG SOCKET	B737
SB737-27-1267	T/E TORQUE TUBE SPLINE CHK PIN	B737
SB737-54-1032	PYLON REPAIR KIT B737	B737
SB737-55A1070	MOUNTING PLATE	B737
SB737-57A1271	ALIGNMENT PIN	B737
SCTR327L	SAFE-T-CABLE TOOL	B737
SE27-0001	CONTROL WHEEL STRAIGHT EDGE	B737
SSI57-20-151/152A/153A/1	REFERENCE STANDARD 737	B737
ST1066RB-1	RELEASE KEY BIN SNUBBER	B737
ST2580-202	MLG TRUNNION LINK	B737
ST2580-302	OWING FUEL NUT TORQ SPANNER	B737
ST2580-436-B1	BOX END WRENCH TOOL	B737

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
ST2580-436-B10	CONNECTOR SOCKET ASSEMBLY	B737
ST2580-436-B9	CONNECTOR SOCKET ASSEMBLY	B737
ST3109H	FLARING TOOL	B737
ST8870-7-8-9	TEST PLATE KIT NDT	B737
ST918A-1800-3000-2875	BEARING REM/INST TOOL	B737
ST926A-1	ROLLER SWAGING TOOL	B737
ST926C-1800-3000-2875	BEARING REM/INST TOOL	B737
ST927C-142	BEARING REM/INST TOOL	B737
ST928C-4	SWAGING TOOL	B737
ST928C-5	ELEVATOR SWAGING BEARING TOOL	B737
TA7533	CAPTIVE SCREW INST TOOL	B737
TE250FU	TORQOMETER	B737
TEK-4042	SLIDING PROBE 40HZ-50KHZ REFL	B737
TP673	TURRET	B737
TSP5101504	ENGINE EXHAUST BLANK B737	B737
TSP510505	ENGINE INTAKE BLANK	B737
W88	WHEEL CHOCK B737CL/NG	B737
WL14L96A	ENGINE INLET COVER CFM56-7	B737
WL15L96A	ENGINE EXHAUST COVER CFM56-7	B737
Y501	DIE SET	B737
474243	CARGO FIRE EXT SQUIB SIM TEST	Embraer
763485	RAT BLADE COVER	Embraer
1708263	RAT HUB COVER	Embraer
000-001	BEARING SWAGING TOOL EMB 2 PCE	Embraer
06-5022-6C00	RUDDER PEDAL SERVICING UNIT	Embraer
1.5MM X 2M	THERMOCOUPLE	Embraer
14-6802-6000	TYRE/STRUT DEFLATOR	Embraer
14-6804-6000	NIT SERVICING REGULATOR HP	Embraer
14PF465KF-1001	TORQUE TUBE KIT	Embraer
170-62060-401-11H1	ELEVATOR SLING, LEFT HAND	Embraer
170-62060-402-11H1	ELEVATOR SLING RH	Embraer
170-62060-801-38H1	L/H ELEV NEUTRAL SETTING TOOL	Embraer
170-62060-802-38H1	R/H ELEV NEUTRAL SETTING TOOL	Embraer
170-63060-401-11H1	RUDDER SLING	Embraer
170-63080-801-11H1	L/E & VERT STAB SLING ADAPTER	Embraer
170T05550-401	L/EDGE SLATS RIGGING TOOL	Embraer
170T05570-001	LEAK DETECTOR-SENSOR FORM BLK	Embraer
171T17969-401	ULTRASONIC TEST PLATE	Embraer
171T17973-401	TEST PLATE	Embraer
190-09144-413-38H1	HORIZONTAL STAB TURNBUCKLE	Embraer

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
190G38301-S01	O/B FLAP SLING	Embraer
190T05560-401	L/E SLATS RIGGING TOOL	Embraer
190T05590-401	CARRIAGE ZERO POSITIONER O/B	Embraer
190T05710-401	CARRIAGE ZERO POSITIONER I/B	Embraer
190T05730-401	JOINT GAUGE, FLAP, SET	Embraer
190T05955-401	SLING FOR INNER FLAP GSE293	Embraer
190T05980-401	RIGGING TOOL SET	Embraer
200-216	BEARING INSTALLATION TOOL EMB	Embraer
209-573	EXT DIGI CALIPER GAUGE 0-20MM	Embraer
2309-T006-001	LOCKNUT SOCKET REM/INST	Embraer
2370-T050-401	FREE-FALL SYSTEM RIGGING PINS	Embraer
2370-T070-401	SPRING MOUNTING TOOL	Embraer
2C91354G02	OIL FILTER BYPASS SENSOR TEST	Embraer
30-805-1301	DIAL INDICATOR - DIGITAL	Embraer
30X-21MM	MAGNIFYING LOUPE 30X	Embraer
41191096-501	SEAT INSTALLATION TOOL	Embraer
415600GSE-1001	ELEVATOR GROUND SUPP UNIT ASSY	Embraer
416200GSE1-1001	RIGGING TOOL, HSTA	Embraer
416200GSE2-1001	UPPER GIMBAL PIN INSERT TOOL	Embraer
497AJM	VACUUM CLEANER ELECTRONIC ESD	Embraer
521-1541	PULLER STRAINER	Embraer
53387-0011	THREAD PROTECTOR MAINWHEEL	Embraer
8TR-XCF-001	ACCESSORY KIT FOR 8TR-DC-002	Embraer
A12039	SOFTWARE	Embraer
A158068-501	BLEED AIR TUBE KIT	Embraer
ADTS553F-EO-SCAS-SR	AIR DATA TEST SET	Embraer
AGE-01106-401	TOOL-SLAT CONTROL LEVER LOCK	Embraer
AGE-01148-401	APU HOISTING BAR	Embraer
AGE-01410-401	RUDDER BACKLASH MEASURE KIT	Embraer
AGE-01414-403	TORQUE/FORCE MEAS, YOKE COLUMN	Embraer
AGE-01629-401	BACKLASH MEASUREMENT DEVICE	Embraer
AGE-01746-401	PARKING/EMER BRAKE RIGGING PIN	Embraer
AGE-01837-403	AIR/GROUND SIMULATION KIT	Embraer
AGE-01847-401	APU LIFTING BAR	Embraer
AGE-02360-001	ECCENTRIC BEARING DEVICE	Embraer
AGE-02694-401	COUPLING ASSY, IDG	Embraer
AGE-02696-401	COUPLING ASSY, APU	Embraer
AGE-02704-001	COUPLING ASSY, NOZZLE LUB	Embraer
AGE-02750-401	SLAT HANDLING SLINGS	Embraer
AGE-02751-401	BAG ONLY (FLY AWAY)	Embraer

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
AGE-02755-401	ADSP COVER REM/INST TOOL	Embraer
AGE-03024-401	RUDDER DEFLECTION DEVICE	Embraer
AGE-03390-401	LEAK TEST, FIREX SYS ADAPT SET	Embraer
AGE-03586-401	ENGINE REMOVAL AUX TOOL SET	Embraer
AGE-03602-401	SUPPORT-DIAL INDICATOR	Embraer
AGE-03750-401	ESCAPE SLIDE DUMMY	Embraer
AGE-03751-401	FLAP RIGGING GO/NO GO GAUGE	Embraer
AGE-03768-401	ENGINE AIR INLET COVER	Embraer
AGE-03794-401	ADS SIMULATOR HARNESS	Embraer
AGE-03814-401	RUDDER BALANCING SUPPORT SET	Embraer
AGE-03841-401	MEASUREMENT KIT, BRAKE PRESSURE	Embraer
AGE-04091-401	PRESSURISATION VALVE PLUG TEST	Embraer
AGE-04134-401	HORIZONTAL STAB BACKLASH KIT	Embraer
AGE-04146-401	HORIZ STAB ACTR BACKLASH KIT	Embraer
AGE-04265-403	RIGGING PINS - FLIGHT CONTROLS	Embraer
AGE-04267-401	ELEVATOR/AILERON BACKLASH KIT	Embraer
AGE-04280-401	FUEL SAMPLE UNIT (NEIVA)	Embraer
AGE-04427-401	HYDRAULIC FLUID SAMPLE UNIT	Embraer
AGE-04748-401	APU SHROUD PLUG LEAK TEST ASSY	Embraer
AGE-05050-401	BOOTSTRAP KIT E170/175	Embraer
AGE-05060-401	TRIPOD ASSEMBLY	Embraer
AGE-05075-201	SOFTWARE, COG CALCULATION	Embraer
AGE-05350-401	PAX&SERVICE DOORS SAFETY PIN	Embraer
AGE-05360-401	CF34-10E BOOTSTRAP KIT	Embraer
AGE-05367-401	LH ADAPTOR ASSEMBLY	Embraer
AGE-05367-402	RH ADAPTOR ASSEMBLY	Embraer
AGE14542	STOW LOCK PIN	Embraer
AT-092775	COWL LOCK PIN UNLOCK	Embraer
B01HJ7AFTM	PC CARD READER	Embraer
BLPCWM12	12MM OFFSET SPLINE COMB WRENCH	Embraer
BT-BS-609	STRAP WRENCH	Embraer
CB100-81	DISPENSER-ADHESIVE CB200-40	Embraer
CBTS-190570046-120N	COLD WORKING KIT	Embraer
CBTS-190570046-140N	COLD WORKING KIT	Embraer
D01066K2D1B01AO	JACK TRIPOD TAIL ERJ175/190	Embraer
D02538K2D1B01AO	JACK TRIPOD MAIN ERJ175/190	Embraer
D07010	BONDING RESISTANCE OHMETER	Embraer
E190-57-001	TEST PLATE NDT	Embraer
E53-002A	LFEC REFERENCE STANDARD	Embraer
E53-002C	LFEC REFERENCE STANDARD	Embraer

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
E53-002D	LFEC REFERENCE STANDARD	Embraer
E53-004	LFEC REFERENCE PLATE	Embraer
E8408458	RMF18004-19X051X027-15,9-02000	Embraer
EMB-00053-001	AILERON/ELEV CONT RECON WRENCH	Embraer
FE374120000	PAX&SERVICE DOORS SAFETY PIN	Embraer
GS25565-1	ENG BLEED LP CHECK VLV TESTER	Embraer
GSE170-LTC52018	DOOR MAINTENANCE TOOL	Embraer
HS02-710	EXTENSION CABLE 15M FOR D07010	Embraer
HT-920B	HEATING TOOL,COMPAIR/NIT 240V	Embraer
IAST4103-6	STAKING TOOL-MS14103-6 BEARING	Embraer
IAST4103-8	STAKING TOOL-MS14103-8 BEARING	Embraer
IDCT4103-5	BEARING CUTTING TOOL	Embraer
IDST4103-5	ROLLER SWAGING TOOL	Embraer
LANTAP-10	LAN INTERFACE KIT	Embraer
LS04-710	LEAD SET FOR D07010	Embraer
MACLUB1620	GOUPLER ASSY,GREASER	Embraer
MH860	CRIMP TOOL	Embraer
N600D-KEE	EDDY CURRENT FLAW DETECTOR	Embraer
QD2RN100A	TORQUE WRENCH 20-100NM	Embraer
QD2RN50A	TORQUE WRENCH 10-15NM	Embraer
RCEI-715A-84	ARINC429 PCMCIA INTERFACE	Embraer
RSE6403	INLET LIFTING ADAPTER	Embraer
S34146-4	STATIC LINE ADAPTER	Embraer
SR16SA	SWAGE TOOL	Embraer
T5-8002-104B-00	CABLE TENSIO METER	Embraer
TH343	TURRET	Embraer
TOWE170S20SH3_TY	TOWBAR ERJ170/175/190/195	Embraer
46673	CRIMP TOOL	Fokker
460006179	TOOL MLG	Fokker
460006180	TOOL	Fokker
1046GT2102AY	BOOMSET	Fokker
18-234	EXTRACTION TOOL	Fokker
2508-0191/2505-1A	STAKING TOOL	Fokker
28-0-1067	ADAPTOR - JACK FUSELAGE F100	Fokker
28-0-1223	MLG - PINTLE PIN PULLER	Fokker
28-0-1327C	ADAPTER-TORQUE	Fokker
28-0-1380D	N/W ADAPTOR	Fokker
28-0-1380E	N/W ADAPTOR	Fokker
28-0-1381C	ADAPTER-M/WHEEL AXLE NUT TORQ	Fokker
28-0-1381D	ADAPTER-M/WHEEL AXLE NUT TORQ	Fokker

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
28-0-1381E	ADAPTER-M/WHEEL AXLE NUT TORQ	Fokker
28-0-1425	INSTALLATION TOOL	Fokker
28-0-1482B	PLUG-CROSSFEED VALVE TEST	Fokker
28-0-1631	BOX SPANNER	Fokker
28-0-1631-2505-1	SPANNER	Fokker
28-0-1668	ADAPTOR	Fokker
28-0-1787B	RIGGING TOOL	Fokker
28-0-1837G	TEST SET BRAKE BLEEDING & TEST	Fokker
28-0-1865	ADAPTER SET(4 PART)	Fokker
28-0-1886C	SPANNER INSTAL HYD P/SWITCH	Fokker
28-0-1933	CLAMP INST PERI-SEAL HOUSING	Fokker
28-0-1951	SPANNER - LIFT DUMPER ACC REPL	Fokker
28-0-1964	ADJ.GAUGE	Fokker
28-0-1978	DRAIN TOOL	Fokker
28-0-1978A	JAR FUEL DRAIN	Fokker
28-0-2055A 1.0MM	FEELER GAUGE	Fokker
28-0-2055A 1.5MM	FEELER GAUGE	Fokker
28-0-2055A 2.0MM	FEELER GAUGE	Fokker
28-0-2055A 2.5MM	FEELER GAUGE	Fokker
28-0-2055A 3.0MM	FEELER GAUGE	Fokker
28-0-2055A 4.0MM	FEELER GAUGE	Fokker
28-0-2055A 4.5MM	FEELER GAUGE	Fokker
28-0-2055A 5.0MM	FEELER GAUGE	Fokker
28-0-2055A 5.5MM	FEELER GAUGE	Fokker
28-0-2055A 6.5MM	FEELER GAUGE	Fokker
28-0-2055A 7.5MM	FEELER GAUGE	Fokker
28-0-2055A 8.0MM	FEELER GAUGE	Fokker
28-0-2069	SPANNER - FUEL QTY	Fokker
28-0-2104	FIXATION TOOL-ELEVATOR	Fokker
28-0-2138	PULLER ACTUATOR MOUNTING PIN	Fokker
28-0-2151A	TOOL SELECTOR VALVE ADJUST	Fokker
28-0-2151B	U/C SELECT VALVE SETTING TOOL	Fokker
28-0-2158	DUMP VALVE ADJUSTMENT TOOL	Fokker
28-0-2158A	TOOL DUMP VALVE ADJ OF ROD	Fokker
28-0-2199C	ACCUMULATOR DRAIN TOOL	Fokker
28-0-2210A	ADAPTER-TORQUE HYD ACCUMULATOR	Fokker
28-0-2323	ADAPTOR	Fokker
28-0-2367	SPANNER FLAP FAIRING SPINDLES	Fokker
28-0-2490	RIGGING PIN KIT	Fokker
28-0-2933B	HOSE	Fokker

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
28-0-3938-05	PIN	Fokker
28-0-3979	YAW DAMP. JIG	Fokker
28-0-3982-2610-1	WRENCH KIT	Fokker
28-0-4088	COVER-AIRCO COOLING INLET	Fokker
28-0-4090	COVER-APU OIL COOLER OUTLET	Fokker
28-0-4092	COVER-AIRCO COOLING AIR OUTLET	Fokker
28-0-4142	FIXTURE-BRAKE DISC ALIGNMENT	Fokker
28-0-4167	PLUG-STALL WARNING SYSTEM TEST	Fokker
28-0-4176	SET-MICROSWITCH ADJ', SE DOORS	Fokker
28-0-4215A	TEST SET-WHEEL SPEED SIM-LIFT'	Fokker
28-0-4225	GROUNDLOCK(DOUBLE)	Fokker
28-0-4225C	SET-GROUNDLOCKS	Fokker
28-0-4225D	GROUND-LOCK THRUST REV F100	Fokker
28-0-4226	TOOL-REM/INS,REAR STUBWING SEA	Fokker
28-0-4236	TOOL RIGGING THRUST REV CABLES	Fokker
28-0-4549B	SET-DUMMY SENSORS(PROXIMITY)	Fokker
28-0-4591	PIN (TOOL)	Fokker
28-0-4637	SAFETY PIN	Fokker
28-0-4733	SET - TARGET PROX SENSING SYS	Fokker
28-0-4760	TOOL GROUND FLIGHT SW ON MLG	Fokker
28-0-4771	MOUNTING SET	Fokker
28-0-4835	RUDDER SUPPORT BEARING KIT	Fokker
28-0-5011	LIFTDUMPER ADAPTER SET	Fokker
28-0-5041	EXTRACTOR TOOL	Fokker
28-0-5217	THREAD PROTECTOR (F70 MLG)	Fokker
28-0-5255	ADAPTER	Fokker
28-0-5328	TOOL-SENSOR DUMMY	Fokker
455822-2	EXTRACT TOOL	Fokker
455830-1-8	INSERT TOOL	Fokker
63819-1300	CRIMP TOOL	Fokker
69692-1	CRIMP TOOL AMP	Fokker
800P7	REMOVAL TOOL	Fokker
810-325	SPANNER BATTERY END COVER	Fokker
810-546	CLAMP VICE BEACON	Fokker
90123-2	CRIMP TOOL	Fokker
91601-1	CRIMP TOOL	Fokker
964-0446-001	FDR TEST SET F70	Fokker
A0018-04	ADAPTOR	Fokker
A0065	FUEL SAMPLING DRAIN TOOL	Fokker
AT24742	TOOL	Fokker

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
AT31687	TORQUE TOOL	Fokker
AVTM125E	TORQUE WRENCH, 12.5-125NM	Fokker
CATL719-10	SPRING BALANCE	Fokker
DLT02MAPP1000	PERMOSWAGE AIR DRIVEN PUMP	Fokker
DLT05PSKT3000	KIT PERMASWAGE	Fokker
DLT05PSKT3002	PERMOSWAGE TOOL KIT	Fokker
DLT10PSKT3002	SWAGING KIT	Fokker
DLT20PSKT3000	SWAGING KIT	Fokker
FTI-F100-57-008	COLD WORKING KIT	Fokker
FTI-F100-57-020-1	COLD WORKING KIT	Fokker
G704B	CHERRY MAX GUN	Fokker
GU28682	SPANNER-POWER PLANT	Fokker
GU29492	GAUGE SETTING BLEED VALVE	Fokker
GU29493	GAUGE-SETTING BLEED VALVE	Fokker
GU29565	EXTRACTOR-POWER PLANT	Fokker
GU29636	SPANNER	Fokker
GU32880	GAUGE - BLEED VALVE 11.18MM	Fokker
GZ39246	BLANKS SET (CAP & PLUG)	Fokker
HSK6263-1	KIT - DECOMP LATCH, BOLT ROTATE	Fokker
HU2648	EXTRACTOR-OIL PUMP ASSY	Fokker
HU82106	EDDY CURRENT INSPECTION KIT	Fokker
K223	POSITIONER	Fokker
K331-1	POSITIONER	Fokker
K41	LOCATOR FOR CRIMP TOOL	Fokker
K42	LOCATOR	Fokker
LB-20	PULLER UNIT	Fokker
M22520-1-05	CRIMP TOOL	Fokker
M22520-1-11	TURRET	Fokker
M7793-12-1	TEST BOX, APU HOUR METER	Fokker
PWC34910-800	FIBRESCOPE GUIDE TUBE PWC100	Fokker
QBA134	STUD REMOVAL TOOL	Fokker
QC2100	TORQUE WRENCH	Fokker
QC6824	TEST PIECE	Fokker
R060-063-090-50	BORESCOPE (F100) - 2 BOXES	Fokker
RST-1006	SWAGING TOOL	Fokker
S0053	CALIBRATION BLOCK	Fokker
S0168	PLATE CALIBRATION	Fokker
ST2075-21	SPANNER F100 MLG	Fokker
ST2095-44	SPANNER VALVE HOUSING NLG	Fokker
TFC20-0003-2	SQUIB TESTER	Fokker

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
TFC20-0004A	SMOKE ALARM/FAULT TESTER	Fokker
TH501	TURRET	Fokker
TIE-100	CONNECTOR TOOL	Fokker
TP915E	TURRETT	Fokker
TP969	DIE/LOCATOR	Fokker
UT501	SPANNER-KEY-LP SHAFT GOVERNOR	Fokker
WA23-9	LOCATOR	Fokker
WS180395	FUSELAGE RESTRAINT STRAP	Fokker
029	ELCON INSPECTION GAUGE NO 029	RJ/BAE146
8028	TYRE INFLATION ADAPTOR 146/RJ	RJ/BAE146
19571	HK DIE SET, ERMA	RJ/BAE146
29215	HE DIE SET, ERMA	RJ/BAE146
30439	DIE SET	RJ/BAE146
505984	UTRASONIC PROBE	RJ/BAE146
4951807	ELAPSED TIME IND BAE RJ APU	RJ/BAE146
200662644	SETTING	RJ/BAE146
200662645	SETTING	RJ/BAE146
460004729	SPANNER RING NUT	RJ/BAE146
460004757	CAP	RJ/BAE146
460004780	PIN EXTRACTOR-DIFFERENTIAL BOX	RJ/BAE146
460004838	STEERING SCALE	RJ/BAE146
460005800	TOOL	RJ/BAE146
460006031	SPROCKET EXTRACTION TOOL-146	RJ/BAE146
090E802550D	CAMLOCK BUSH INST TOOL 146/RJ	RJ/BAE146
1&1/4"CROWSFOOT	CROWSFOOT 1&1/4 X 1/2" DR	RJ/BAE146
110-0430-100	RAD ALT TEST SET	RJ/BAE146
12-500-3	PROGRAMMING ADAPTOR	RJ/BAE146
2077K000	TEST ADAPTOR	RJ/BAE146
2863T000	TOOL	RJ/BAE146
31551-408	ANTI RE-COIL CAP	RJ/BAE146
31551-414	RECOIL BLANK	RJ/BAE146
35-40	ROTATE BLOCK	RJ/BAE146
40-45	ROTATE BLOCK	RJ/BAE146
41-110	COUPLING	RJ/BAE146
41-5	MINI HOIST	RJ/BAE146
42-1	MINI HOIST	RJ/BAE146
42-355	SHEATH	RJ/BAE146
468-765	GNS TEST PLUG - TOOL	RJ/BAE146
53-10-12	TEST BLOCK KIT	RJ/BAE146
53-10-126/1	REFERENCE STANDARD	RJ/BAE146

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
53-10-130/158/1	REFERENCE STANDARD - NDT	RJ/BAE146
53-10-153/155/175/193/194	REFERENCE STANDARD - NDT	RJ/BAE146
53-10-192/1	REFERENCE STANDARD	RJ/BAE146
53-20-145/1	REFERENCE STANDARD - NDT	RJ/BAE146
53-20-149/1	REFERENCE STANDARD	RJ/BAE146
53-20-155/1/2	REFERENCE STANDARD	RJ/BAE146
53-20-155/1/3	REFERENCE STANDARD	RJ/BAE146
53-20-155/1/4	REFERENCE STANDARD	RJ/BAE146
53-20-157/1	REFERENCE STANDARD	RJ/BAE146
53-20-157/2	REFERENCE STANDARD	RJ/BAE146
53-20-179/2	REFERENCE STANDARD - NDT	RJ/BAE146
53-20-183/1	REFERENCE STANDARD	RJ/BAE146
53-20-183/2	REFERENCE STANDARD	RJ/BAE146
53-30-13-1	CALIBRATION REFERENCE STANDARD	RJ/BAE146
53-30-131/1	REFERENCE STANDARD	RJ/BAE146
53-30-13-2	CALIBRATION REFERENCE STANDARD	RJ/BAE146
53-30-174/177/179/1	REFERENCE STANDARD	RJ/BAE146
53-30-174/177/179/2	REFERENCE STANDARD	RJ/BAE146
53-40-125/1	REFERENCE STANDARD	RJ/BAE146
55-31-105/1	REF NDT STANDARD BLOCK	RJ/BAE146
55-31-109/2	REFERENCE STANDARD	RJ/BAE146
55-31-NDT1	REFERENCE STANDARD	RJ/BAE146
55-33-101/1	REFERENCE STANDARD NDTM	RJ/BAE146
55-33-101/2	REFERNCE STANDARD NDTM	RJ/BAE146
55-33-101/3	REFERENCE STANDARD NDTM	RJ/BAE146
57-10-102/2	REFERENCE STANDARD - NDT	RJ/BAE146
57-10-111/1	TEST PLATE NDT	RJ/BAE146
57-10-111/2	TEST PLATE NDT	RJ/BAE146
57-10-117/1	TEST PLATE NDT	RJ/BAE146
57-10-117/2	TEST PLATE NDT	RJ/BAE146
57-10-117/2-L2	NDT REF PLATE LAYER2	RJ/BAE146
57-20-151/152A/153A/1	TEST PLATE NDT	RJ/BAE146
57-20-183/2	REFERENCE STANDARD	RJ/BAE146
AL2771SHT1	COVER	RJ/BAE146
AL2773SHT1	ASI STATIC BLANK	RJ/BAE146
AL2776SHT1	COVER	RJ/BAE146
AL2790-SHT1	BLANK APU INTAKE	RJ/BAE146
AL2793-1	BLANK - HEAT EXCHANGER COOLER	RJ/BAE146
ATD2062	EXTRACT TOOL	RJ/BAE146
BM80-2	TEST SET-MEGGER,INSUL.& CONTIN	RJ/BAE146

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
CBM-12-0-N-1-40-V1	MANDREL,TYPE1 CBM-V1	RJ/BAE146
CTS408R29A	OXYGEN CHARGE ADAPTOR	RJ/BAE146
CTS408R35A	OXY HOSE ASSY	RJ/BAE146
D7670A	OIL DRAIN ADAPTOR-CONSTANT SPE	RJ/BAE146
DLT05MAPM1000	HAND PUMP	RJ/BAE146
DRK169	EXTRACTION TOOL	RJ/BAE146
DRT68134	CALIBRATION BLOCK	RJ/BAE146
E55-19	RIB 1 LONGERON NUT REM SOCKET	RJ/BAE146
FT-BX-C1	TOOL BOX	RJ/BAE146
G84	RIVETER	RJ/BAE146
GLA12	STEP UP 1"M - 1/2"F	RJ/BAE146
HC130H0003-002	GROUND LOCK - NOSE GEAR	RJ/BAE146
HC130H0031-000	SPANNER-FUEL PUMP	RJ/BAE146
HC130H0071-000	ADAPTOR	RJ/BAE146
HC130H0082-000	EXTRACTOR,HINGE PIN	RJ/BAE146
HC130H0103-000	DRIVE ADAPTOR-FLAP TORQUE	RJ/BAE146
HC130H0108-000	CLAMP TOOL SCREWJACK LOCKING	RJ/BAE146
HC130H0112-000	COLLAR	RJ/BAE146
HC130H0112-000(SET 6)	COLLAR SET (6)	RJ/BAE146
HC130H0112-000-SET6	COLLAR SET (6)	RJ/BAE146
HC130H0119-000	REMOVAL TOOL	RJ/BAE146
HC130H0204-002	BRAKE BLEED TOOL	RJ/BAE146
HC130H0257-000	SPECIAL SPANNER	RJ/BAE146
HC130J0001-000	AIRBRAKE GAG	RJ/BAE146
HC131H0012-002	RIGGING PIN SET	RJ/BAE146
HC132H0001-000	N.L.G ADAPTER	RJ/BAE146
HC132H0006-000	JACKING ADAPTOR-146 FUSELAGE	RJ/BAE146
HC132H0009-000	ENG HOISTING KIT	RJ/BAE146
HC132H0027-000	SUPPORT	RJ/BAE146
HC132H0100-004	CHAIN REST MLG	RJ/BAE146
HC132H0100-006	CHAIN	RJ/BAE146
HC132H0250-022	GEAR,HOISTING MLG OLEO-146/RJ	RJ/BAE146
HC132H0326-000	ADAPTER	RJ/BAE146
HC132J0013-000	SLING	RJ/BAE146
HC135H0079-000	CABLE ASSY	RJ/BAE146
HC135H0080-000	CABLE ASSY	RJ/BAE146
HC135H1025-000	EXTENSION LEAD FOR PV1597A	RJ/BAE146
HC135H1026-000	CABLE - EXTENSION HHDLU	RJ/BAE146
HC929H5715-000	ANTENNA LOOM ASSY	RJ/BAE146
HCM00654AT01	ALIGNMENT JIG KIT	RJ/BAE146

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
ISB.53-203	WING LINK BOLT INST/REM TOOL	RJ/BAE146
ISB53-194	REAMER KIT FRAME 29	RJ/BAE146
JC7588-4657	HAND PUMP TEST RIG	RJ/BAE146
K330-3	POSITIONER	RJ/BAE146
K363	TURRET	RJ/BAE146
K496-1	LOCATOR	RJ/BAE146
K51S	TURRET	RJ/BAE146
K742	POSITIONER - FOR CRIMP TOOL	RJ/BAE146
K817	TURRET	RJ/BAE146
LOM236-5156-5000-70-SC	REAMER - SOLID CARBIDE PILOTED	RJ/BAE146
LTCT13857-01	TORQUE WRENCH	RJ/BAE146
LTCT14615-01	COUPLING	RJ/BAE146
LTCT14818	PULLER HYDRAULIC	RJ/BAE146
LTCT7185-01	CLAMP	RJ/BAE146
LTCT7316-01	IND	RJ/BAE146
LTCT7494-01	TOOL 3 ENG FERRY	RJ/BAE146
LTCT7857-01	TEMP PROBE	RJ/BAE146
MEST001	STARTER MOTOR ALIGNMENT TOOL	RJ/BAE146
MT1026-8-NLG	RAM GRIP TOOL NLG	RJ/BAE146
NDT-NAS6310U-27	ENGINE REFERENCE BOLT (NDT)	RJ/BAE146
PKA34-18	PROBE NDT	RJ/BAE146
RST1007	SWAGING TOOL TRI-ROLLER	RJ/BAE146
RST1019	SWAGING TOOL TRI-ROLLER	RJ/BAE146
RUK-SHB-071098	NLG SIDE WALL DIAPHRAGM TESTER	RJ/BAE146
S53-10-103.3/1	REFERENCE STANDARD	RJ/BAE146
SOCKET 1&15/16" AF	1&15/16" AF SOCKET	RJ/BAE146
SORFIT 146/151/1	REFERENCE STANDARD	RJ/BAE146
SORFIT 146/151/2	REFERENCE STANDARD	RJ/BAE146
SORFIT 146/164/1	REFERENCE STANDARD	RJ/BAE146
SSI55-11-115/1	REFERENCE STANDARD	RJ/BAE146
SSI57-20-151/152A/153A/2	TEST PLATE NDT	RJ/BAE146
STD236-7	PILOTED REAMER 21/64IN	RJ/BAE146
T5021	GAUGE	RJ/BAE146
TH415	TURRET HEAD	RJ/BAE146
TH561-1	TURRET HEAD	RJ/BAE146
UG981108-02	APPLICATION GUN	RJ/BAE146
WS603-3	SOCKET	RJ/BAE146
WS603-4	SOCKET	RJ/BAE146
WS603-5	SOCKET	RJ/BAE146
WS603-6	SOCKET	RJ/BAE146

PART NUMBER	DESCRIPTION	AIRCRAFT TYPE
WS603-7	SOCKET-KAYNER NUT H51133-7K7	RJ/BAE146
WS603-8	SPLINED SOCKET (SIZE -8)	RJ/BAE146
Y630P	DIE SET	RJ/BAE146
YRK-210-6326K	BURR SET-146/RJ GROMMET REM(3)	RJ/BAE146